

KeySafe

VERSION 2
Firmware Rev 2H & 3.1



**Consulting Professional Engineers
Pty Ltd**
ABN 43 078 257 315

Check Inn Systems Division

Factory 13, 38 Christensen Street
Cheltenham, Vic 3192
Australia

Phone +61 3 9555 5444
Fax +61 3 9555 5445
Email: sales@checkinn.com.au




Installation Guide


1 Loosen but do not remove the 4 screws holding the cover plate. This takes 2–3 turns maximum. Remove the cover and gently remove the reset cable noting its position.




2 Remove the top (and second) row of solenoids by removing the 2 screws. Caution—be careful not to damage the cable when removing the solenoid assembly.

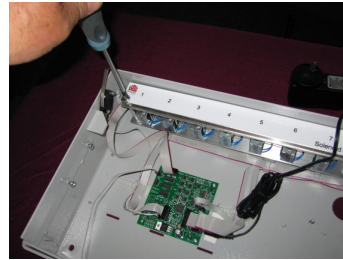



3 Remove the cable and put the solenoid assembly aside.

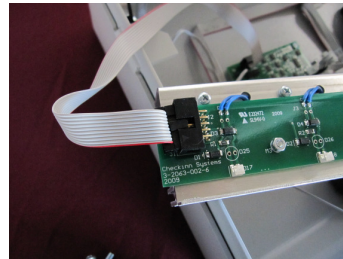

4 You may now position the chassis on the wall and mark the mounting hole positions. You should also mark out the cable access hole. We suggest a 10–12 mm hole for the cable. Other power options are also available. The chassis can be mounted using a variety of fixings to suit the wall.

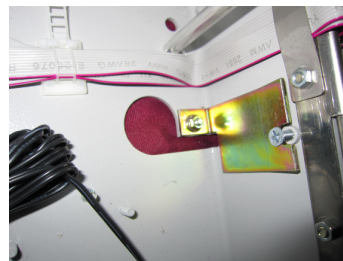

5 Note that there are 2 different sized power plug options, the lower one being for a standard 2.1-5 mm connector, the top one for a 2.5-5 mm connector

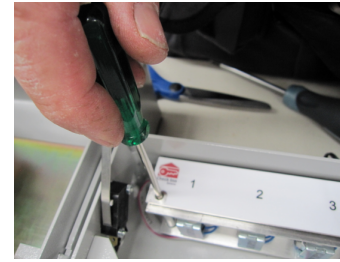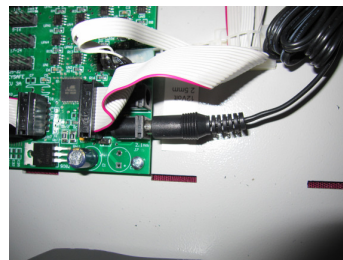

6 Replace the solenoid cable and carefully put the solenoid assembly back and replace the screws.



7 Replace the cover panel and tighten the screws.

8 PLEASE CHECK

If the connectors have come loose, please double check the locations as damage can be caused if they are not correctly replaced. This will not be covered by warranty.

